

# Installation Instructions

 **WARNING**



**Risk of Fire, Electrical Shock, Cuts or other Casualty Hazards-** Installation and maintenance of this product must be performed by a qualified electrician. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.



**Risk of Fire and Electric Shock-** Make certain power is OFF before starting installation or attempting any maintenance. Disconnect power at fuse or circuit breaker.



**Risk of Fire-** Refer to product label for specific minimum supply conductor requirements.  
**Risk of Burn-** Disconnect power and allow fixture to cool before handling or servicing.



**Risk of Personal Injury-** Fixture may become damaged and/or unstable if not installed properly.  
 Failure to comply with these instructions may result in death, serious bodily injury and property damage.

**Note:** These instructions do not claim to cover all details or variations in the equipment, procedure, or process described, nor to provide directions for meeting every possible contingency during installation, operation or maintenance. When additional information is desired to satisfy a problem not covered sufficiently for user's purpose, please contact your nearest representative.


**Note:** Specifications and dimensions subject to change without notice.


**DISCLAIMER OF LIABILITY:** Cooper Lighting Solutions assumes no liability for damages or losses of any kind that may arise from the improper, careless, or negligent installation, handling or use of this product.

**NOTICE:** Green ground screw provided in proper location. Do not relocate.

**ATTENTION Receiving Department:** Note actual fixture description of any shortage or noticeable damage on delivery receipt. File claim for common carrier (LTL) directly with carrier. Claims for concealed damage must be filed within 15 days of delivery. All damaged material, complete with original packing must be retained.

**Safety:** This fixture must be wired in accordance with the National Electrical Code and applicable local codes and ordinances. Proper grounding is required to insure personal safety. Carefully observe grounding procedure under installation section.

Type Number	Power	Voltage	Frequency	CCT	
REVOLVE120 WPL LED18S/840 PSU L600	16W	AC 220-240V	50/60Hz	4000K	0.75
REVOLVE120 WPL LED25S/840 PSU L1200	22W			4000K	1.10
REVOLVE120 WPL LED49S/840 PSU L1200	44W			4000K	1.15
REVOLVE120 WPL LED49S/865 PSU L1200	44W			6500K	1.15
REVOLVE120 WPL LED36S/840 PSU L1500	31W			4000K	1.35
REVOLVE120 WPL LED70S/840 PSU L1500	53W			4000K	1.40
REVOLVE120 WPL LED70S/865 PSU L1500	53W			6500K	1.40

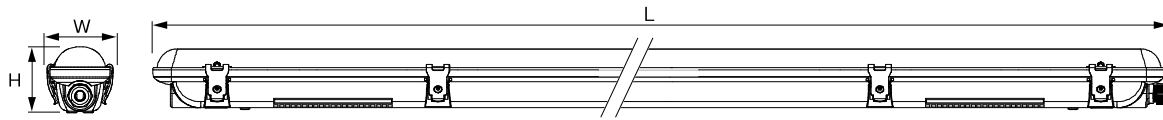

Size	L	W	H	Unit
L600	607	71	74	mm
L1200	1207			
L1500	1507			

### Installation Instructions:

1. Turn off the Luminaire before installing.
2. Connect the Luminaire as the recommended implementation above. Make sure the connection points meet IP65.
3. Turn on Luminaire after installation completed.

**1**

**Mounting distance**

Size	L600	L1200	L1500
A	210-350	660-880	960-1160

**2**

**3**

**4**

**5**

$45$   
 $30$     $8$   
  
 $\varnothing 1.0-2.5\text{mm}^2$   
 $\varnothing 7-\varnothing 10\text{mm}$

**6**

CLICK

**7**

**foil needs to be removed**

**Diagonal mounting**

Size	Min installation distance(mm)
L600	275
L1200	330
L1500	360